



Cleaning & Care Guide

Flex VRA video monitors ship with dust covers (*Figure A*) and a microfiber cleaning cloth (*Figure B*). The dust covers help protect the display from dust and debris buildup over time and can also be used on days when the VRA system is not in use.

The included microfiber cleaning cloth may be used to gently wipe the screen to remove dust, fingerprints, and light smudges. If needed, a screen cleaner designed for electronics (such as those used for smartphones or tablets) is safe to use. You may also use a lightly dampened cloth with water only. Always apply the cleaner or water to the cloth rather than directly to the screen.

What Not to Use

To avoid damage to the display or enclosure, do not use:

- Abrasive cloths
- Ammonia-based cleaners
- Alcohol, solvents, or harsh chemical cleaners
- Scraping or scratching the monitor to remove debris
- Excessive moisture or liquid applied directly to the screen

Disclaimer

Improper cleaning methods or the use of unauthorized cleaning products may result in damage to the display or other components. Damage caused by improper cleaning is not covered under the Flex VRA warranty. If you have questions about proper care or cleaning, please contact Flex VRA support before proceeding.



Figure A



Figure B